Updated sampling considerations and protocols for assessing groundwater ecosystems

2nd September 2021

Prepared by/Author(s):

Louise Weaver, Annette Bolton, Phil Abraham



 PREPARED FOR:
 Tasman District Council under Envirolink contract C03X2002-2

 CLIENT REPORT No:
 CSC20026b

 REPORT NUMBER:
 2110-TSDC172-2

 REVIEWED BY:
 Murray Close

E/S/R Sampling considerations and protocols for assessing groundwater ecosystems

ACKNOWLEDGEMENTS

We thank the following for their interest and support in this project: Joseph Thomas (Tasman District Council), Karen Shearer (Cawthron), Tasman District Council Environmental Monitoring Staff, and land owners for access to the sites for the pilot scale sampling.

We thank ESR technical staff with assistance in field sampling and establishing methods. We also would like to thank Murray Close (ESR) for reviewing the report.

The original report was supported by Ministry for Business Industry and Employment (MBIE) Envirolink Medium grant (1861-TSDC143) and the sampling was supported by SSIF Pioneer funding (ESR). The updated report has been funded jointly through MBIE Envirolink Small grant and ESR SSIF funding. The authors are grateful for this support.

Manager/Peer reviewer

mEClore

Mr Murray Close

Senior Science Leader Groundwater team Food, Water and Biowaste Group

Author

Louse tites

Dr Louise Weaver

Senior Scientist Groundwater team Food, Water and Biowaste Group


Author

Dr Annette Bolton

Senior Scientist Risk, Response & Social Systems Group Author

Mr Phil Abraham

Principal Technician Groundwater team Food, Water and Biowaste Group



DISCLAIMER

The Institute of Environmental Science and Research Limited (ESR) has used all reasonable endeavours to ensure that the information contained in this client report is a ccurate. However, ESR does not give any express or implied warranty as to the completeness of the information contained in this client report or that it will be suitable for any purposes other than those specifically contemplated during the Project or agreed by ESR and the Client.

CONTENTS

	(NO	WLEDGEMENTS2
CON	NTEN	NTS4
LIS	r of	FIGURES
EXE	CUT	TIVE SUMMARY7
1.	PUF	RPOSE AND SCOPE OF THIS GUIDANCE
2.	BAC	CKGROUND INFORMATION10
	2.1	PREPARATION FOR SAMPLING10
	2.2	MICROORGANISMS11
	2.3	PROTOZOA 11
	2.4	MEIO- AND MACRO FAUNA (STYGOFAUNA/STYGOBITES) 12
	2.5	SAMPLING STRATEGY13
	2.6	PILOT STUDY
	2.7	ROUTINE MONITORING STRATEGY14
	2.8	SKILLS, TRAINING AND EXPERIENCE14
	2.9	PERMITS AND APPROVALS15
	2.10	HEALTH AND SAFETY15
	2.11	DATA MANAGEMENT15
	2.12	EQUIPMENT
3.	PRC	DCEDURE
	3.1	PREPARATION FOR SAMPLING17
	3.2	SITE DETAILS
	3.3	NET HAUL METHOD 18
	3.4	PUMPING THROUGH A SIEVE

E/S/R Sampling considerations and protocols for assessing groundwater ecosystems

3.5	PRESSURISED FIELD FILTERING METHOD (MICROBIAL SAMPLES)	22				
3.6	COMPLETION OF SAMPLING	24				
3.7	PERISTALTIC PUMP FILTERING METHOD (MEIOFAUNAL SAMPLES)	24				
3.8	IN SITU BIOFILM SAMPLERS	26				
	3.8.1 DEPLOYMENT	26				
	3.8.2 RETRIEVAL	26				
Referer	ices	.29				
APPENDIX A: SAMPLING EQUIPMENT						
APPEN	APPENDIX B: Field sampling notes33					

LIST OF FIGURES

LIST OF FIGURES

FIGURE 1: COMPOSITION OF DESCRIBED GROUNDWATER FAUNA IN NEW ZEALA (SCARSBROOK ET AL. 2003)	
FIGURE 2: NET SAMPLING IMAGES.	19
FIGURE 3: SIEVE SAMPLING IMAGES	21
FIGURE 4: APPARATUS AND PROCEDURE FOR MICROBIAL SAMPLING WITH IN- FIELD PRESSURE FILTRATION FOR COLLECTION OF LARGE VOLUMES	23
FIGURE 5: PHOTOGRAPH OF MEIOFAUNA SET UP IN THE FIELD.	25
FIGURE 6: SCHEMATIC OF THE BIOFILM BAG PREPARATION AND PLACEMENT IN THE WELL.	

EXECUTIVE SUMMARY

Note: This protocol supersedes the previous document, "Sampling considerations and protocols for assessing groundwater ecosystems (Weaver et al., 2018).

For the original protocol (Weaver et al., 2018), an Envirolink medium advice grant from the Ministry of Business, Innovation and Employment was sought by Tasman District Council (TDC) and the Institute of Environmental Science and Research Ltd. (ESR), to take the first steps towards standardising a sampling protocol for collection of groundwater ecosystem communities in New Zealand. The following protocol provides updated guidance on how to sample the typical biota expected in groundwater monitoring wells and springs including macroinvertebrates (stygofauna or stygobites), meio- and micro-fauna. Guidance is provided for the sampling methodology to adopt as well as the suggested frequency. This version of the guidance has been updated since the 2018 version. It includes a methodology to collect meiofauna (microscopic multicellular motile organisms) an important part of groundwater ecosystem. The methodology also suggests the use of conical shaped sampling nets for more efficient sieving of pumped groundwater. The rest of the methodology remains the same as the 2018 report.

ESR are currently involved in several research programmes on groundwater ecosystems and have expanded their knowledge of groundwater ecosystems in New Zealand. This knowledge will be used to determine the varying ecosystem profiles, groundwater ecosystem health and its water resource impacts, including potential risks to public health. This is a new and emerging area of expertise and one which has not yet been transferred to Regional/ Unitary Authorities and District Councils for implementation within their routine State of the Environment Monitoring (SEM), analysis and reporting. Knowledge on the ecosystem of groundwater systems can benefit Councils, community and iwi. Understanding how biological diversity varies, aquifer chemistry and recharge can improve overall groundwater management.

The changes in water quality occurring will be seen in changes to biological diversity. Most water in surface water and spring fed system during base-flows are sourced from groundwater discharge. The groundwater ecosystems are the processes that essentially keen aquifers clean. However, our understanding of these processes and the organisms involved in Aotearoa New Zealand are limited. The information gained from sampling will improve the science in this area and allow Aotearoa to make evidence-informed decisions to enhance and protect our drinking water for future generations. One of the first steps is to transfer knowledge to regional councils on their sampling strategies for assessing the groundwater ecology.

In order to transfer this knowledge from the science to "real life", ESR scientists and technicians met with key TDC staff to discuss their SEM strategies for Groundwater Ecosystem Assessment (GEA). ESR offered advice on GEA sampling techniques and protocols for TDC and developed field sampling techniques for the individual catchment setting and selected suitable sites to sample both groundwater and groundwater emergent spring systems. Some aspects may be similar to both, but each system has its own specific setting including geology, hydrogeology and hydrology. Site visits were undertaken to gain an understanding of the context of the catchment situation.

From these meetings and site evaluations, ESR have produced the following suggested sampling protocol be considered for future monitoring including coverage to meet TDC's

SEM requirements. ESR also assisted TDC to take samples at suitably identified sites for validation of the sampling plan. Water chemistry, microbiological and macroinvertebrate sampling was undertaken to demonstrate sampling techniques for the different components. The water chemistry samples were analysed externally (Hill Laboratories). Longer term, water chemistry can be combined with ESRs microbiological and macroinvertebrate assessment to provide baseline (pilots scale) data for TDC.

The knowledge gained in this Envirolink report will have wide reaching impacts for other regions. Not only will it up-skill regional and district council staff it will also aid in the wider national discussion required with Government, other RCs, iwi and communities on land-use and its potential impact on groundwater, interrelated surface/spring water quality and potential human health implications. Considerations for assessment of groundwater faunal diversity are made in this report and a suggested sampling protocol is included for Tasman District Council as the first step in knowledge transfer.

1. PURPOSE AND SCOPE OF THIS GUIDANCE

This document has been designed for use by Tasman District Council (TDC). The guidance *could* also be used by other regional councils, but careful consideration needs to be made as to the site-specific variables. This guidance is designed to help establish the most appropriate method to sample groundwater systems for biological assessment.

In this report we consider predominantly groundwater ecosystems but do include consideration of the wider groundwater dependent ecosystems (i.e. Springs). It is noted that for many regions, groundwater biodiversity is not regularly monitored. The background, recommendations, and sampling protocol provide guidance and suggested methods to optimise the opportunity to obtain a representative sample across the whole ecosystem. Biological assessment is used to evaluate the condition of other waterbodies (notably rivers, lakes, and streams), using surveys and other direct measurements of resident biological organisms (macroinvertebrates, fish, microbiology and plants). Before biological assessments of *groundwater* can be made, baseline surveys and knowledge of key species are required. These baseline studies can then be further developed and combined with long term chemical and biological monitoring surveys to provide a method of assessing groundwater ecosystem health. To demonstrate the suggested sampling protocol, a pilot scale sampling demonstration was undertaken in the Takaka catchment by TDC and ESR in 2018, 2019 and 2020. The biodiversity recorded are included in the report Bolton and Weaver (2021).

2. BACKGROUND INFORMATION

The focus on groundwater systems in the past has typically involved problematic organisms, i.e. those that can cause disease. Key processes are known to occur in groundwater that ultimately protect it as a pristine source of drinking and irrigation water (Danielopol and Griebler 2008, Griebler and Avramov 2015). Despite the importance that is placed on groundwater as a source of drinking and irrigation supply, the biota that live within it, are poorly understood, and often undervalued. The lack of regular and national data means that any undocumented biodiversity is potentially threatened by anthropogenic change (e.g. quarrying, mining, extraction, pollution), and long-term hydrological change that may occur as a result of climate change (Maurice 2009). Without basic evidence that establishes groundwater biodiversity, it is impossible to assess probable impacts (Hancock and Boulton 2009). Land use intensification for industry and agriculture has created greater contaminant loads, which are a threat to groundwater quality. Research has demonstrated that the complex ecosystem present (from microorganisms to macrofauna vis Stygofauna) plays a role in removing contaminants. Each of these fauna have specific function, habitats and interrelationships which are currently poorly understood.

Efforts by Local and Regional Councils to improve our understanding of this important resource will help build a better picture of how healthy our groundwater systems are across New Zealand. Groundwater biodiversity and the biological functioning that occurs from the many species living in this environment, play an essential role as providers of ecosystem goods and services. A non-exhaustive list of these services would include:

- nutrient cycling and storage (e.g. carbon, nitrogen, phosphorus)
- organic matter cycling and redistribution
- water treatment (e.g. filtering water to remove toxins) and
- water regulation (e.g. increasing the size of interstitial pore spaces to maintain hydraulic flow pathways and infiltration rates, see Glanville et al. 2016).

Before sampling in any aquifer is undertaken, a desktop review should be completed to ascertain the information available at the geographic setting. Relevant information includes: the likely presence or absence of groundwater fauna (e.g. local geographic setting, hydrology, presence of alluvium and hydrological connectivity, identification of subterranean fauna from previous studies), and assessments of the likely impact on groundwater fauna from direct or indirect occurrences. If there is insufficient information, sampling should be undertaken as a pilot study to better understand the local setting and to determine any groundwater fauna present. There may be occasions when, after the desk top study, the impact on groundwater fauna is deemed unlikely and so emphasis of sampling can be targeted to other more impacted areas.

2.1 PREPARATION FOR SAMPLING

The objective of many studies is to include an assessment of the biodiversity and therefore one aim is to sample as many species as possible¹. Sampling can be designed to increase the likelihood of capturing the maximum number of organisms using a variety of techniques.

Sampling considerations and protocols for assessing groundwater ecosystems

¹ <u>http://nora.nerc.ac.uk/id/eprint/14751/1/OR09061.pdf</u> (Maurice et al 2009) **E/S/R**

There is a consensus that repeated sampling is needed to capture more of the diversity and abundance of groundwater fauna. Different sampling methods (net hauling, pumping, trapping and discrete interval sampling) can affect the results obtained and therefore each individual study should have a unique and carefully thought-out sample design that enables the required information to be obtained. Repeated net hauls and pumping appear to be the best methods of capturing the greatest diversity according to the literature on this topic (Hancock and Boulton 2009, Michel et al. 2009). Discrete interval sampling of both water chemistry and fauna would be useful in studies aimed at understanding the location of fauna in the aquifer and the relationship between the water chemistry of their habitat.

Groundwater contains many organisms ranging from micro (archaea, bacteria), meio-(protozoa, mites etc.) to macro- (stygofauna or stygobites). Each of these organisms have an important biological role in keeping groundwater clean and contaminant free. The different organisms that can be found in groundwater are briefly described below. As in other food webs there is a pyramid food web with large numbers of primary producers, i.e. microorganisms to very few top predators, e.g. Stygofauna.

2.2 MICROORGANISMS

Microorganisms present in groundwater ecosystems are the primary producers of the ecological food web. Microorganisms (a.k.a. microbes) in these environments can include bacteria, archaea, and fungi. Bacteria are microscopic single celled organisms that lack a nucleus and have a cell wall. Archaea, also single celled microscopic organisms, were once a branch of bacteria but research has shown them to be a distinct group of organisms. Fungi are larger than bacteria and tend to form long filaments.

Groundwater differs from other aquatic environments in that organic carbon is not replenished by photosynthetic processes but must be supplied from the surface or groundwater environment itself. To have a healthy and fully functioning groundwater ecosystem the balance of these microorganisms is key. The services provided by microorganisms include carbon assimilation, denitrification, sulphate and iron reduction. Microorganisms can influence groundwater quality such as pH, redox status, dissolved oxygen concentration and mineral component composition. Bacteria within the microorganisms' present provide a protection to environmental extremes by growing in a biofilm (Weaver et al. 2015). Organisms within this slime layer (extra polysaccharide substrate, EPS) are protected from extremes such as desiccation and communication (quorum sensing) also occurs within this layer. Higher (larger) organisms graze on microorganisms directly or on the slime layer (EPS) thus preventing overgrowth of the biofilm which could cause clogging of the aquifer. Fungi within the microorganisms' present are more susceptible to environmental conditions, redox status in particular as they require oxygen to function. Bacteria and archaea are less effected by redox status as some can convert to anaerobic respiration and some are obligate anaerobes.

2.3 PROTOZOA

The protozoa are larger than bacteria and possess a nucleus but lack a cell wall. Protozoa are present in both shallow and deep groundwater systems but are dependent on oxygen therefore redox status is important in their survival (Harvey et al. 1995). There is evidence

that increases in cyst forming flagellate protozoa occurs down stream of contaminant plumes indicating a protozoan role in contaminant degradation (Zarda et al. 1998, Harvey et al. 2011). Flagellates and amoeba dominate the protozoan communities present in groundwater communities.

Whilst the importance of these organisms is now being recognised internationally there is little research in New Zealand on groundwater protozoa. In this report we have designed a protocol to sample live protozoa, with the understanding that there is little data to identify these organisms, and little research on their role in groundwater at present.

2.4 MEIO- AND MACRO FAUNA (STYGOFAUNA/STYGOBITES)

Together the meio- and macro-fauna in New Zealand consist of 8 described taxa (Figure 1), which in terms of abundance, are dominated by acari (mites). These abundances are quite different when compared to studies overseas that show copepoda, acari, amphipoda and isopoda to contain the highest abundance (Scarsbrook et al. 2003). Other species have no doubt been discovered, and few have been described, notably amphipods (Fenwick 2006). It is without a doubt that there are more species awaiting discovery.

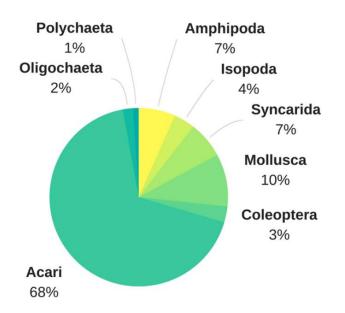


Figure 1: Composition of described groundwater fauna in New Zealand (Scarsbrook et al. 2003)

Meio-fauna are microscopic multicellular motile organisms. Within this grouping of organisms are acari (mites), copepods, oligochaetes, and nematodes (worms), tardigrades (water bears) and rotifers. There is a lack of research on these potentially important group of fauna in groundwater systems. It is known that the abundance of meio-fauna is much greater than

macrofauna and that they potentially play an important role in contaminant removal but more research is required in this area to fully understand their role.

Macrofauna includes stygofauna which as a term encompasses a variety of diverse types of organisms that are found in groundwater varying in size. Stygofauna include crustaceans such as amphipods, isopod and syncarida, coleopteran (beetles) and molluscs. It includes organisms that are obligate (restricted to a particular function or mode of life), groundwater-adapted organisms that complete their entire lifecycle within groundwater aquifers (stygobites), and those that are not specifically groundwater-adapted but are able to survive the harsh conditions in aquifers (stygoxenes and stygophiles). Stygobites have a lifecycle that occurs completely in groundwater, with no surface stage, and are often differentiated by their lack of eyes and pigmentation. Globally, they are believed to be important indicators of water quality and biodiversity (Korbel, Hancock et al. 2013, Korbel and Hose 2015). It is well known that surface dwelling invertebrates are sensitive to environmental and human change, yet we are still only beginning to understand the importance this relationship when applied to stygofauna.

2.5 SAMPLING STRATEGY

Currently, there is no standard method for sampling groundwater biodiversity in New Zealand. However, numerous studies and ad-hoc reports exist locally and internationally on this subject (Gibert and Culver 2009, Griebler 2009, Gutjahr, Bork et al. 2013). This document has analysed and compiled those, selecting the most commonly used in terms of efficiency and effectiveness, recognising that sampling conditions in New Zealand may be different to other countries. The associated sampling protocol suggests an approach to maximise the chance of identifying the biodiversity present across the taxa (microbes to macrofauna). It is likely to be refined as further groundwater ecosystem studies are published, thus improvements or additional samples will improve with time.

In addition, the collection and storage of the information gathered is essential for sharing. In the future we envisage that data collecting from field sampling should be gathered into a central, open-source database to allow scientists both in academia, regional councils and others, to analyse the data across several sites in New Zealand. This can be used to examine a number of research questions related to lithology, season, and species richness and also groundwater ecosystem health and ecosystem services across the country. For further reading refer to overseas literature (Danielopol and Griebler 2008, Dole-Olivier, Castellarini et al. 2009, Griebler 2009, Korbel, Hancock et al. 2013, Marmonier, Maazouzi et al. 2013, Griebler and Avramov 2015, Korbel and Hose 2015, Marmonier, Maazouzi et al. 2018).

The sampling protocols here have been developed and modified using existing protocols, in particular from the Department of Environment and Heritage Protection in Queensland, Australia and Dole-Olivier, Castellarini et al. (2009). Each protocol is designed so that it can be separately printed (and preferably laminated) to be taken into the field. It is advised that the user becomes familiar with this sampling protocol beforehand. In addition, it is anticipated that in future this protocol, or future protocols, will be accompanied with video examples of each sampling technique that can be loaded locally onto a smart phone or tablet, or accessed via the internet if this is available at the field site.

2.6 PILOT STUDY

It is recommended that, prior to full sampling, a smaller (pilot) scale study is undertaken at the aquifer of interest. This is primarily to address any knowledge or technical issues identified in the desktop review. The pilot study should also be used to verify the outcomes of the desktop study and be used to further design the routine monitoring sampling strategy. The Australian guidelines (Clifton et al. 2007) suggest that 10 representative bores are studied using the same methodologies as to be used in the routine monitoring. It is suggested in lieu of any alternative that this is the optimal number of bores to be sampled but if not practical, a maximum number of bores are sampled closest to the 10 bores suggested. The same sampling methods should be used in the pilot study and any future routine monitoring. As microbes are ubiquitous in groundwater environments it is suggested that the initial pilot study focusses on the larger macroinvertebrates (Stygofauna) initially. The presence of macroinvertebrates in pilot studies should then initiate a routine monitoring strategy to comprehensively study the diversity present.

2.7 ROUTINE MONITORING STRATEGY

First, based on the desktop assessment, a site-specific strategy should be devised depending on the required outcomes. For a general diversity assessment effort need to be made to cover all the geological formations present but concentrating on areas where full diversity is likely (or has been demonstrated) to be present. This will optimise efforts to identify all species present and give a good picture of the overall diversity. Sampling should be undertaken initially for at least two seasons with sampling occurring at least three months apart to minimise effects from previous sampling. With the aim of sampling representative bores, the following needs to be considered:

- Groundwater macrofauna would have access to the borehole/well if the screen has slots >2 mm.
- The bore is at least six months' old
- The bore has groundwater present

When sampling for complete diversity assessment i.e. microbes to macroinvertebrates considerations need to be made with multiple sampling strategies employed e.g. net hauls, pumping.

In addition, for sampling of macroinvertebrates the bore should **not** be purged prior to sampling to maximise the chance of collection of specimens. However, if the bore has not been purged or sampled in the past year, or longer, it should be purged up to 6 - 8 weeks prior to sampling (depending on the flow rates within the aquifer).

2.8 SKILLS, TRAINING AND EXPERIENCE

Skills, training and/or experience required to understand and/or undertake this method include training and experience in groundwater sampling. Other training or experience that may be useful includes collection and identification of river and stream freshwater invertebrates.

2.9 PERMITS AND APPROVALS

Permits, permissions to access private and Māori land, and consultation with local iwi should be sought prior to field sampling. Summaries of the key findings should be given to the relevant stakeholders and opportunities to discuss the sampling and research offered to those interested parties.

2.10 HEALTH AND SAFETY

Before following the methods outlined in this document, a detailed risk management process (identification, assessment, control and review of the hazards and risks) must be undertaken. All work carried out must comply with the District or Regional Council's Work Health and Safety legislative obligations.

The equipment required will depend on the type of sampling. At a minimum, for health and safety reasons, the following equipment should be taken:

- First aid kit (preferably one team member will be basic first aid trained and/or field first aid trained)
- A fieldwork buddy (fieldwork alone is not advised)
- Notification of planned field trip, times, location, contact number and planned returned time. Field workers should confirm their return with nominated buddy who is not working in the field (i.e. in the office, located close by).
- Communication device that will work in the field
- Water and food
- Sun protection (if working during high UV months)
- Study shoes or steel toe cap boots (depending on whether heavy machinery is required)
- Suitable clothing, including gum boots in case of inclement weather
- Hi-vis vest or coat
- Vehicle suitable for the terrain
- Any personal medicines/medical devices (e.g. insulin, inhaler, epinephrine)
- Map
- Head torch
- Emergency contact details/location of closest medical centre
- Fire extinguisher

2.11 DATA MANAGEMENT

Any data collected during groundwater diversity assessment should be provided and stored in a suitable format to enable uploading into a wider database in the future. At a minimum the date sampled, site location (including coordinates), sampling method(s) used, geological formation and lithology sampled, water quality measurements, field measurements (temperature, pH, salinity, total borehole depth and depth to water table), taxa identified and abundance of each taxon.

2.12 EQUIPMENT

Appendix 1 provides a suggested equipment checklist which can be amended as appropriate for the specific sampling plan.

E/S/R Sampling considerations and protocols for assessing groundwater ecosystems

3. PROCEDURE

3.1 PREPARATION FOR SAMPLING

Ensure all equipment is functioning and not faulty, all nets are complete (i.e. hole free) and microbiological equipment is sterilised.

3.2 SITE DETAILS

Well/bore selection is an important part of establishing a reliable GW ecosystem monitoring site. Construction details of the well/bore should be known in advance. A site card should be taken in the field recording the following parameters:

Well/bore number	Casing material	Reduced Level (Ground Level and Measuring Point)		
Depth	Screen position	Measuring Point above Ground		
Diameter	Global Positioning System (GPS) location co- ordinates	Owner contact details		
Photo	Location map	Historical water level/field meter info		

If no previous records have been taken collect details to complete site card for future reference. Record, water level (WL), metres below ground level, (mbgl), well surrounds (ground level (GL), measuring point (MP) reduced level (RL)), land use, weather, photograph site record and any other factors that may influence the sample.

IMPORTANCE OF ASEPTIC SAMPLING

Aseptic sampling is a technique that ensures both the sampler and the sampling equipment do not contaminate or cross contaminate the sample. Decontamination procedures should be followed to minimise risk of cross-contamination between boreholes and sites. At a minimum 70% ethanol should be used to clean equipment. Optimally equipment should be soaked in Decon90 solution (according to manufacturer's instructions) and rinsed with 70% ethanol. In the field in between boreholes and sites decontamination of equipment should take place with 70% ethanol. Nitrile or latex gloves should be worn when undertaking microbiological sampling.

FIELD MEASUREMENTS AND WATER CHEMISTRY SAMPLING

Record field parameters (water temperature, dissolved oxygen (DO), oxygen reducing potential (ORP), specific conductivity, etc. by placing the hose into a weir system to reduce re-aeration of the sample and sample with a field multiprobe.

Water chemistry samples (e.g. Nutrients, Dissolved Organic Carbon, metals etc.) should be collected straight from the hose into the sampling containers once stygofauna sampling has finished (i.e. after 100 L has been collected in sample buckets).

3.3 NET HAUL METHOD

The net procedure aims to sample benthic (within the sediment) and pelagic (within water column) meio and macrofauna from the groundwater ecosystem. The net design comes from (Clifton, Cossens et al. 2007). It consists of a weighted glass McCartney vial with the bottom removed and attached to a 63 μ M (or smaller) pore sieve mesh. The cap has a hole punched, also covered with a 63 μ M mesh that is secured when the cap is screwed to the bottle (Figure 2a).

[OPTIONAL FOR LIVE SAMPLES] – For immediate field observation live samples can be collected. This requires some pumped water from the well. Empty some well water into a bucket (approximately 200 mL), then open the contents of the bottom net and allow contents to empty (Figure 2c). Submerse the rest of the net into the bucket so that all the sides drain into the bucket. Pour the bucket contents into a suitable container, label as live samples (refer to processing sheet for live samples). Live samples should be transferred to a cool box in the dark until they can be processed in the lab.

Ensure that the net and bottom mesh of the McCartney vial is clean and in place. Connect the top of the net to the line and reel.

- 1. Lower the net to the bottom of the bore (Figure 2b) using a line and reel.
- 2. Once the net has reached the bottom of the bore, raise the net up and down to dislodge any fauna attached to the bottom of the bore. The net should be drawn up and down a distance of approximately 0.5 m and a total of four times.
- 3. Reel the net up in a smooth and steady motion (~0.1-0.2 m/sec) to avoid a bow wave and losing any fauna captured.
- 4. Place the bucket sieve into a dark coloured plastic bucket. Once the net is clear of the bore, remove the collecting vial and pour the contents into the 50 μ M mesh sieve in the bucket. Ensure the net does not touch the ground.
- 5. Hold the net over the sieve and wash using water from a wash bottle.
- 6. Repeat steps 1 to 6 above four times in total, once before pumping and three more times after pumping has been completed.

- 7. Collect all washings into one pre labelled sample bottle (Figure 2d). The bottle label should record the bore number, collection date, sample number and sample type (net or pump) and the sampler's initials and surname.
- 8. Tilt the sieve and wash the contents of the sieve into a sample jar (Figure 2d). Preserve the sample with 90-100% ethanol.


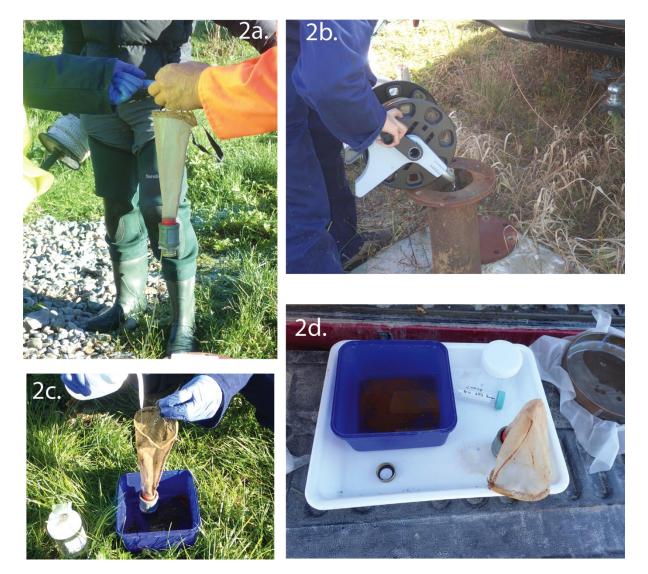


Figure 2: Net sampling images. Figure 2a shows the net with the end cap sampling container; Figure 2b demonstrates a reel set up for lowing and raising the net; Figure 2c shows washing of the net; Figure 2d shows the sample washed from the net in the blue container prior to pouring into wide necked sample container (white lid).



3.4 PUMPING THROUGH A SIEVE

Pumping aims to sample meio and macrofauna from the screen and aquifer sediments immediately outside the well. It is preferable to use a mechanical piston type pump as impeller driven pumps are more likely to damage fauna during collection. In the literature (Hancock, Eberhard et al. 2007) the Bennett Pump (a reciprocating piston pump) has been shown to be an effective pump for GW meio and macrofauna sampling at a range of depths, although the inlet screen must be removed before use (Figure 3a). Hand inertia pumps can also be used at shallow depths. All pumps should be used as per manufacturer's instructions.

- 1. Prior to lowering the pump down the well, check for any obstructions.
- 2. Feed the sampling hose into the bore until it reaches the bottom of the bore casing. Then lift hose so that it sits either midway in the screened section or approximately 0.5 m above the bottom of the bore.
- Set out a row of ten x 10L buckets, equivalent to a total of a 100 L sample (Figure 2b). Sit the buckets onto tarpaulin as a clean site for collection of samples. If the area surrounding the bore is heavily vegetated, clear the vegetation to provide flat surface. A weed trimmer/brush cutter maybe required for thick vegetation.
- 4. On the top of the first bucket place the modified nets² (350 μ M on top of the 250 μ M, on top of the 65 μ M) (in place of sediment sieves used in previous protocol).
- 5. Start the pump and place hose inside the top net. Once the bucket is full move all the nets into the next bucket and continue to sieve (Figure 3d).
- 6. Fill buckets sequentially and try to minimise splashing and overflows.
- 7. Once 100L has been collected, remove the nets and invert each one into a pre labelled container.
- 8. Using a 99% ethanol squirt bottle, rinse the contents into the container, and add a few drops of Rose Bengal. Store in 99% ethanol for future identification.
- 9. A waterproof label with the bore number, net size, collection date, sample number and sample type should be inserted into the container.

NOTE: If meiofauna samples are required, retain 10L of water from the first and last bucket (see Section 3.7)


- 10. Record bore number, water level depth, collection date, sample number and sample type (i.e. net or pump) on a label and add label to jar.
- 11. Water chemistry samples (e.g. Nutrients, Dissolved Organic Carbon, metals etc.) should be collected straight from the hose into the sampling containers once stygofauna sampling has finished (i.e. after 100 L has been collected in sample buckets).
- 12. Sample bottles must be labelled and the sample name, site, data and time and sampler name must be recorded in a notebook or equivalent.
- 13. Record field parameters (temp, DO, ORP, specific conductivity, etc. by placing the hose into a weir system to reduce re-aeration of the sample and sample with a field multiprobe.

² We used nets that are used to sieve honey and are available in apiary suppliers. The 63 μM and 250 μM nets were made using the same specification. We found that transferring between buckets was much easier using this method, and as all the material was collected in a smaller space, inverting the nets and rinsing out the material was also much easier than using a flat sediment sieve.





Figure 3: Sieve sampling images. Figure 3a shows the Bennett pump; Figure 3b indicates a suggested 100 L sampling layout (note 20 L buckets were used in this case); Figure 3c shows the sieve set up with the 250 μ M net on top of 150 μ M, on top of 63 μ M net.



3.5 PRESSURISED FIELD FILTERING METHOD (MICROBIAL SAMPLES)

Pressurised field filtering aims to collect a representative groundwater sample of the microbial diversity. Pressure filtration involves using compressed air to force large volumes (>20 L) of water from a pressure pot through a filter housing sequentially containing a 1.2 μ M and 0.22 μ M filter papers. The residue on the filter paper is what is submitted for microbial diversity analysis.

This method uses high pressure air (~35 psi). Safety glasses and sterile PPE must be worn. Compressor should be used as per manufacturer's instructions.

NOTE: Equipment used for pressure filtration used:

Pressure pot – A stainless steel pot that can withstand 10bar (150 psi) pressure and has safety valve and pressure gauge. Suitable pressure pots include paint spray pressure pots (from numerous outlets e.g. NZSafety), membrane filtration pressure containers (e.g. Pall Gelman).

Filtration unit – Pressure filtration holder suitable to withstand pressure of up to 7bar (100psi) with safety vent to release pressure (e.g. Advantec 301900, Cole-Parmer). Holders have PTFE gaskets, sillcone O-rings and PTFE-coated stainless steel support to prevent filters sticking.

- 1. Collect 10-20 L volumes of pumped water into a clean sterile bucket (depending on pressure pot size).
- 2. Aseptically pour this pumped water into the sterile pressure pot (capacity of this device will mean more than one filling is necessary) (Figure 4a)
- Aseptically place 0.22μM and 1.2 μM pore size filters with the 0.22 filter on the bottom of the filter housing and the 1.2 μM filter on the top. (Figure 4b and 4c)
- 4. Fit the top of the filter housing tightly and connect the hose from the pressure pot to the filter housing.
- 5. Start the compressor and allow groundwater to pass through the filters.
 - i. **Note**: keep pressure passing through the filters as low as possible (up to 2.5bar) to prevent breaking filter.
- 6. Record the total volume collected after filtration (may be more than one filling of the pressure pot) i.e. the filtrate.

Note: if more than 20 L is required repeat steps 1 to 5 above.

- Once at least 20 L has passed through the filters aseptically place filters into a sterile pre labelled container and cover with preservative (LifeGuard[™] or RNALater^{™3}) (Figure 4d to 4f).
- 8. Label container with sample name, site, date and time and sampler name.
- 9. Store immediately in dark at <10deg Celcius.

³ Lifeguard[™] Soil Preservation Solution, Qiagen, Melbourne, Australia; RNALater[™] Solution, Thermo Fisher Scientific, Baltics, UAB.



Sampling considerations and protocols for assessing groundwater ecosystems

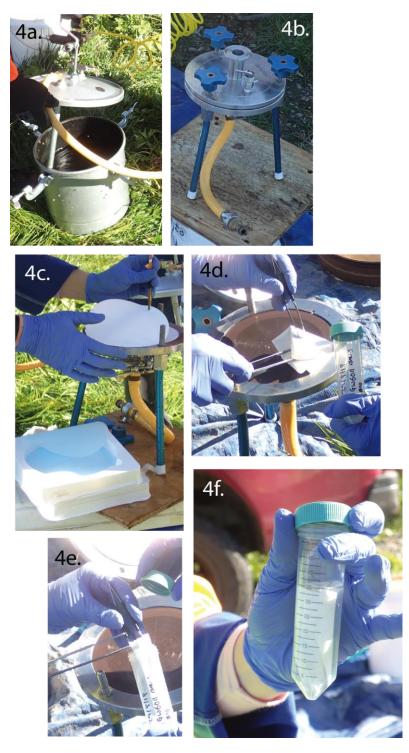


Figure 4: Apparatus and procedure for microbial sampling with in-field pressure filtration for collection of large volumes. Figure 4a shows the pressure pot with sample before being closed; Figure 4b shows the filtration housing; Figure 4c shows placement of the filters onto the open filter housing; Figure 4d demonstrates folding of the filter before placement into the collection tube; Figure 4e shows placement into the collection tube; and Figure 4f shows the filter in the tube with preservation fluid added.

3.6 COMPLETION OF SAMPLING

After sampling is completed, remove hose from the bore and pump and empty it of water. Pump a solution of 70% ethanol or Decon90 through the hose to decontaminate it, then pump thoroughly with tap water.

Wash the outside of the hose and wipe dry with a towel to prevent grass and dirt sticking to the hose and contaminating the next bore.

3.7 PERISTALTIC PUMP FILTERING METHOD (MEIOFAUNAL SAMPLES)

This method has been added since the first sampling protocol (2018). It allows for the sampling of live protozoa (meio-fauna).

Peristaltic pump filtering aims to collect a representative groundwater sample of the meiofaunal (mobile) diversity. Peristaltic pump filtering involves filtering set amounts of groundwater (10L) from the first and last pumped samples, filtering the samples (e.g. using a track etched polycarbonate 10 μ M pore size membrane (47 mm diameter)) to trap live meiofauna. The filter paper is transferred into media to keep samples alive until reaching the laboratory for identification. Meiofauna are an important component of the groundwater ecosystem. For more background refer to Gilbert et al 1994.

- Collect two 10 L sample of the 100-litre pumped well water, one at the start of sieve sample collection and one after the last bucket collected. Retain a little more (approx. 50 ml per sample for the falcon tunes).
- Run each of these water samples through a peristaltic pump (e.g. Masterflex I/P Pump, with 9610-73 tubing, Masterflex) and filter through a track etched polycarbonate 10 μM pore size membrane (47 mm diameter) at a minimum flow rate (set to approx. 1 LPM (Litres Per Minute)). Figure 5 shows the suggested set up for in the field.
- 3. Place the filter before the pump head⁴
- 4. Transfer the filtered membranes into falcon tubes containing a 50:50 mixture of groundwater and a traditional hay and milk broth⁵ to maintain meiofauna prior to identification.
- 5. Refrigerate samples at 4°C prior to returning to the laboratory.
- Following 22-25 days of incubation in the dark at 12(±2) °C, examine the samples using a light microscope (x400 magnification) for presence or absence of live organisms.
- 7. Add additional broth to the samples every week, view and record organisms under the microscope following a further 6-9 days. It is recommended to video and photograph live samples, including a scale, which is more useful for identifying various phyla.

⁴ In previous laboratory experiments this was found to minimise the loss of live microorganisms. ⁵ Hay and milk broth according to Glaser and Coria (1930) and Altermatt et al (2015).

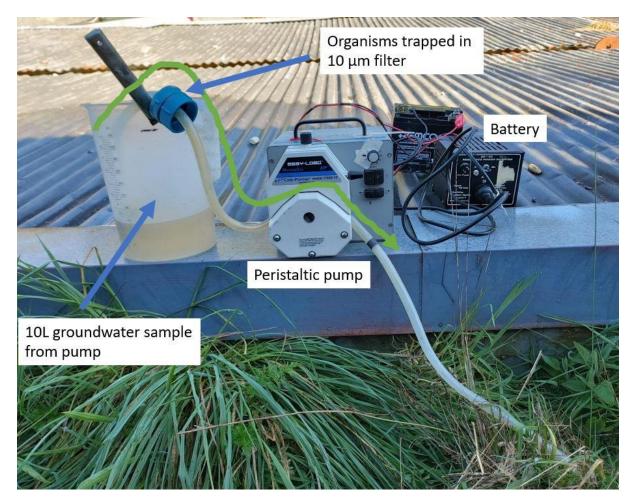


Figure 5: Photograph of meiofauna set up in the field. 10L of groundwater from the first and last buckets are pumped (separately) using a peristaltic pump through a 10um filter. The pump is powered by a battery. Once filtered, the filter paper is transferred into a falcon tube containing a 50:50 mixture of broth⁶ and groundwater.

⁶ Refer to Glaser and Coria (1930) and Altermatt et al (2015) **E/S/R** Sampling considerations and protocols for assessing groundwater ecosystems

3.8 IN SITU BIOFILM SAMPLERS

The *in-situ* biofilm sampler aims to collect a representative GW ecosystem community sample that has established over time. The microbial biofilms will grow on the gravel or other aquifer substrate and larger organisms are also captured around the bags and in the water contained in the sampler. It involves placing 63 μ M mesh fabric bags containing sterile fine gravel or aquifer substrate in a PVC cartridge that is deployed down the well for a period of about 6 months (Williamson et al. 2012, Weaver et al. 2015). The bags are later harvested and sent for microbial diversity analysis using next generation sequencing.

3.8.1 DEPLOYMENT

- 1. Take the *in situ* sampler and place biofilm bags into the sampler (Figure 6a to 6b).
- 2. Attach two different coloured cords with the same length as the total depth of the well. Note and label on the cords which cord is attached to the inner sleeve and which to the outer sleeve.
- 3. Holding both sets of cord separately slowly lower the sampler in to the well.
- 4. Once at the water table move the sampler up and down to allow it to fill with water and then continue to drop the sampler into the well.
- 5. Once at the bottom of the well (non-screened well) or midway in the screened section raise the cord attached to the inner sleeve of the sampler so the screened section is above the outer sleeve (Figure 6c).
- 6. Secure both cords at the top of the well.

If the well is pumped or sampled between deployment and retrieval it is important to remove the in situ sampler, store in a column of well water while the sampling or pumping is taking place and then replace the in situ sampler back down the well.

3.8.2 RETRIEVAL

- 1. Label sterile 250 mL wide necked pot with date, time, site/location, well/spring, sampler.
- 2. Open lid of pot and place lid so inside is facing up i.e. not touching the ground next to pot.
- 3. Put on latex (or equivalent) gloves.
- 4. Reel up biofilm bags taking care not to touch the bag.
- 5. Place the bag into pot and cut the string/fishing line off bag.
- 6. Put lid back on pot do not touch the inside of the pot/lid or touch the bag.
- 7. Place pot into chilly bin with ice packs immediately and keep in dark.
- 8. Once sampling has been completed add label to outside of chilly bin and send to:

FAO: Judith Webber/Louise Weaver ESR Ltd. Christchurch Science Centre 27 Creyke Road Ilam Christchurch 8045


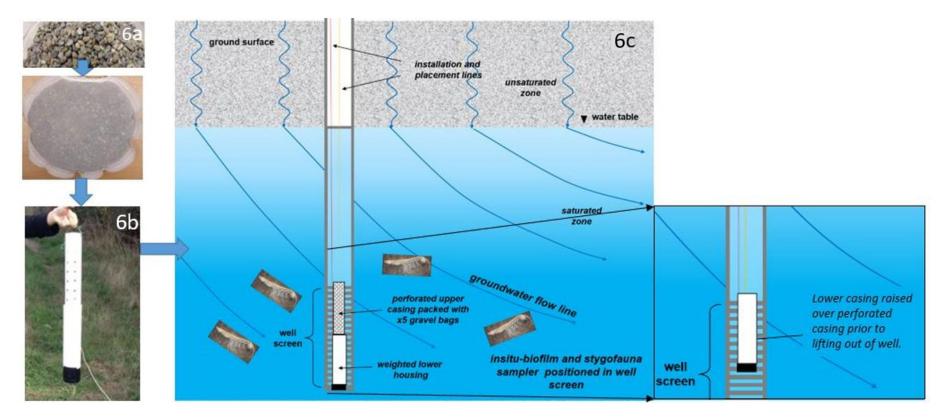


Figure 6: Schematic of the biofilm bag preparation and placement in the well. Figure 6a shows typical material from the bore to be sampled and placement in the biofilm bag; Figure 6b shows the in-situ sampler containing biofilm bags before deployment; Figure 6c shows placement of the *in situ* sampler within the screened section of the well with the outer casing lower than the perforated casing while biofilm is establishing. Prior to sampling the outer casing is raised over the perforated casing BEFORE the *in situ* sampler is raised out of the well. Note: Stygofauna are **not** to scale.



REFERENCES

Altermatt, F., Fronhofer, E.A., Garnier, A., et al. (2015). Big answers from small worlds: A user's guide for protist microcosms as a model system in ecology and evolution. *Methods in Ecology and Evolution* 6(2):218-23 DOI: 10.1111/2041-210X.12312

Bolton, A., L. Weaver (2021). Preliminary assessment of groundwater dependent ecosystems: Invertebrate groundwater fauna, Takaka, Golden Bay, Tasman. ESR Client Report (CSC20026), prepared for Tasman District Council under MBIE Envirolink contract C03X2002-1.

Clifton, C., B. Cossens, C. McAuley, R. Evans, P. Cook, P. Howe and A. Boulton (2007). Report 1: Assessment Toolbox. Prepared for Land and Water Australia. A framework for assessing the environmental water requirements of groundwater dependent ecosystems. Land and Water Australia.

Danielopol, D. L. and C. Griebler (2008). Changing Paradigms in Groundwater Ecology from the 'Living Fossils' Tradition to the 'New Groundwater Ecology'. *International Review of Hydrobiology* 93(4-5): 565-577.

Dole-Olivier, M.-J., F. Castellarini, N. Coineau, D. M. P. Galassi, P. Martin, N. Mori, A. Valdecasas and J. Gibert (2009). Towards an optimal sampling strategy to assess groundwater biodiversity: comparison across six European regions. *Freshwater Biology* 54(4): 777-796.

Fenwick, G. D. (2006). *Ringanui*, a new genus of stygobitic amphipod from New Zealand (Amphipoda: Gammaridea: Paraleptamphopidae). *Zootaxa* 1148: 1-25.

Gilbert, J. and D. C. Culver (2009). Assessing and conserving groundwater biodiversity: an introduction. *Freshwater Biology* 54(4): 639-648.

Gilbert, J., Stanford, J.A., Dole-Oliver, M.-J., Ward, J.V. (1994). Basic attributes of groundwater ecosystems and prospects for research. In: Gilbert, J., Danielopol, D.L., Stanford, J.A., (eds) Groundwater Ecology. Academic Press, San Diego, CA, 8–42.

Anon. The distribution and diversity of stygobites in Great Britain: An analysis to inform groundwater management. Available from:

https://www.researchgate.net/publication/245378157_The_distribution_and_diversity_of_sty gobites_in_Great_Britain_An_analysis_to_inform_groundwater_management [accessed May 03 2021].

Glanville, K., C. Schulz, M. Tomlinson and D. Butler (2016). Biodiversity and biogeography of groundwater invertebrates in Queensland, Australia. *Subterranean Biology* 17: 55-76.

Glaser, R.W. and Coria, N.A. (1930) Methods for the pure culture of certain protozoa. *Journal of Experimental Medicine* 51 (5): 787–806. doi: <u>https://doi.org/10.1084/jem.51.5.787</u>

Griebler, C. and M. Avramov (2015). Groundwater ecosystem services: a review. *Freshwater Science* 34(1): 355-367.

Griebler, C., Lueders, T. (2009). Microbial biodiversity in groundwater ecosystems. *Freshwater Biology* 54(4): 649-677.

Gutjahr, S., J. Bork, S. I. Schmidt and H. J. Hahn (2013). Efficiency of sampling invertebrates in groundwater habitats. *Limnologica* - Ecology and Management of Inland Waters 43(1): 43-48.

Hancock, P. J. and A. J. Boulton (2009). Sampling groundwater fauna: efficiency of rapid assessment methods tested in bores in eastern Australia. *Freshwater Biology* 54(4): 902-917.

Hancock, P., S. Eberhard and G. Bennison (2007). Atlas Pardoo Direct Shipping Ore Project - Subterranean Fauna Assessment. Final Report to Atlas Iron Limited. Brisbane, Australia: 94.

Harvey, R. W., N. E. Kinner, A. Bunn, D. Macdonald and D. Metge (1995). Transport behaviour of groundwater protozoa and protozoan-sized microspheres in sandy aquifer sediments. *Applied and Environmental Microbiology* 61(1): 209-217.

Harvey, R. W., D. W. Metge, A. Mohanram, X. Gao and J. Chorover (2011). Differential Effects of Dissolved Organic Carbon upon Re-Entrainment and Surface Properties of Groundwater Bacteria and Bacteria-Sized Microspheres during Transport through a Contaminated, Sandy Aquifer. *Environ. Sci. Technol.* 45(8): 3252-3259.

Korbel, K. L., P. J. Hancock, P. Serov, R. P. Lim and G. C. Hose (2013). Groundwater Ecosystems Vary with Land Use across a Mixed Agricultural Landscape. *Journal of Environmental Quality* 42(2): 380-390.

Korbel, K. L. and G. C. Hose (2015). Habitat, water quality, seasonality, or site? Identifying environmental correlates of the distribution of groundwater biota. *Freshwater Science* 34(1): 329-343.


Marmonier, P., C. Maazouzi, N. Baran, S. Blanchet, A. Ritter, M. Saplairoles, M.-J. Dole-Olivier, D. M. P. Galassi, D. Eme, S. Dolédec and C. Piscart (2018). Ecology-based evaluation of groundwater ecosystems under intensive agriculture: A combination of community analysis and sentinel exposure. *Science of The Total Environment* 613-614: 1353-1366.

Marmonier, P., C. Maazouzi, A. Foulquier, S. Navel, C. François, F. Hervant, F. Mermillod-Blondin, A. Vieney, S. Barraud, A. Togola and C. Piscart (2013). The use of crustaceans as sentinel organisms to evaluate groundwater ecological quality. *Ecological Engineering* 57: 118-132.

Maurice, L. (2009). Groundwater Ecology Literature Review. British Geological Survey Open Report. Keyworth, Nottingham, UK, British Geological Survey: 37 pp.

Michel, G., F. Malard, L. Deharveng, T. Di Lorenzo, B. Sket and C. De Broyer (2009). Reserve selection for conserving groundwater biodiversity. *Freshwater Biology* 54(4): 861-876.

Scarsbrook, M. R., G. D. Fenwick, I. C. Duggan and M. Haase (2003). A guide to the groundwater invertebrates of New Zealand. NIWA Science and Technology Series. Wellington, New Zealand, NIWA. No. 51.



Weaver, L., A. Bolton, P. M. Abraham (2018). Sampling considerations and protocols for assessing groundwater ecosystems. ESR Report (CSC 18008) prepared for Tasman District Council under MBIE Envirolink contract 1861-TSDC143.

Weaver, L., J. B. Webber, A. C. Hickson, P. M. Abraham and M. E. Close (2015). Biofilm resilience to desiccation in groundwater aquifers: A laboratory and field study. *Science of The Total Environment* 514: 281-289.

Williamson, W. M., M. E. Close, M. M. Leonard, J. B. Webber and S. Lin (2012). Groundwater Biofilm Dynamics Grown In Situ Along a Nutrient Gradient. *Ground Water* **50**(5): 690-703.

Zarda, B., G. Mattison, A. Hess, D. Hahn, P. Höhener and J. Zeyer (1998). Analysis of bacterial and protozoan communities in an aquifer contaminated with monoaromatic hydrocarbons. *FEMS Microbiology Ecology* 27(2): 141-152.

APPENDIX A: SAMPLING EQUIPMENT

Equipment	✓
Weighted phreatobiological nets (63- μ m mesh) (See Figure 1a). Check for holes ⁷ .	
Waterproof markers, pencils, paper etc	
Sample containers: wide necked large (>250 mL) pots, sterile Falcon tubes (or similar), bottles for water chemistry	
Single use pipettes	
Video equipment or camera (ipad is OK)	
99% ethanol	
Nitrile or latex gloves	
Rinse bottle filled with 70% ethanol	
Rinse bottle filled with demineralised water	
Chilly bins with ice packs	
Tissues and wipes	
Pumping equipment	
Power supply	
Compressor	
Hoses and reel	
Buckets (at least 10 L) to give total volume collection of 100 L	
Field probes	
V-nets, 63 µm, 250 µm and 350 µm	
Tweezers	
Dark open containers for net and sieve samples	

⁷ http://onlinelibrary.wiley.com/doi/10.1111/j.1365-2427.2007.01878.x/full



Sampling considerations and protocols for assessing groundwater ecosystems

APPENDIX B: FIELD SAMPLING NOTES

Site ID:	Analyst:					
Date:						
Location Name:						
Location and sampling notes (include weath	ner conditions):					
Well depth (m):Height of	collar:					
Does casing extend entire length of bore?:_						
Is the bore screened?:						
Time started sampling:	_Time ended sampling:					
Water depth (mbgl):						
Field parameters read: Time:						
GW temperature (deg C):						
GW specific conductivity (µS/cm):						
GW dissolved oxygen (DO%):						
GW DO (mg/l):						
GW pH:						
GW ORP (mV):						
Water chemistry taken? Y?N, if Y sent to (a	ddress & quote number):					

Photographs Taken: YES \Box NO \Box


Photographs notes/ID:

Sample ID	Purged (y/n)	Netting (y/n)	Pumping (y/n)	Type of pumping	Volume pumped for sieving (L)	Volume pressure filtered (L)	Number of filters used	2 nd netting (y/n)	Biofilm bags deployed/ collected? (y/n)	Comments
Date										
Time started										
Time ended										

Extra notes:

Faunal Sample:

Other data:





INSTITUTE OF ENVIRONMENTAL SCIENCE AND RESEARCH LIMITED

- Kenepuru Science Centre

 34 Kenepuru Drive, Kenepuru, Porirua 5022

 PO Box 50348, Porirua 5240

 New Zealand

 T: +64 4 914 0700

 F: +64 4 914 0770
- Mt Albert Science Centre 120 Mt Albert Road, Sandringham, Auckland 1025 Private Bag 92021, Auckland 1142 New Zealand T: +64 9 815 3670 F: +64 9 849 6046
- NCBID Wallaceville

 66 Ward Street, Wallaceville, Upper Hutt 5018

 P0 Box 40158, Upper Hutt 5140

 New Zealand

 T: +64 4 529 0600

 F: +64 4 529 0601
- Christchurch Science Centre 27 Creyke Road, llam, Christchurch 8041 PO Box 29181, Christchurch 8540 New Zealand T:+64 3 351 6019 F:+64 3 351 0010

www.esr.cri.nz